



General Instructions A

1. Install the **Receiver** at the furnace, fan-coil, heat pump, PTAC or RTU.

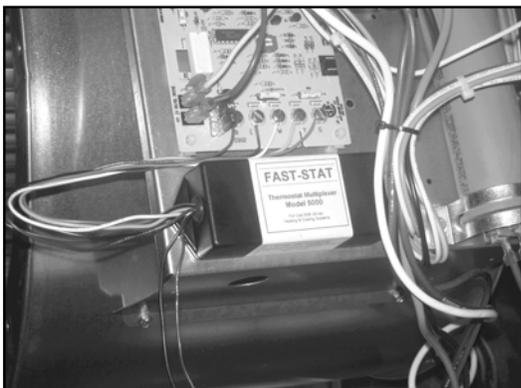

-
2. Connect the **Sender** to the existing thermostat cable and new thermostat. The Sender is then installed into the wall space behind the thermostat.

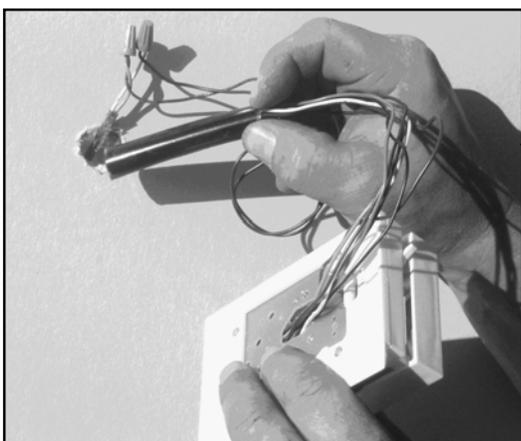

General Instructions B

- Thermostat



Sender

All **FAST-STAT** models require a minimum of two wires between the Sender & Receiver.

Receiver

- Furnace
- Heat Pump
- Fan-Coil
- PTAC
- RTU



Sender

Extra wires can be used for other functions.

Receiver

