

Installation

Install the Time Release Pan Treatment in the condensate pan between the coil and the drain opening. You want to intercept the path of the water to the opening, but not cover the opening itself. Put the strip the farthest from the opening where condensate water occurs. The polyester sock absorbs water and stays where placed in the pan.

Figure 1
Coil and Drain Pan Arrangement


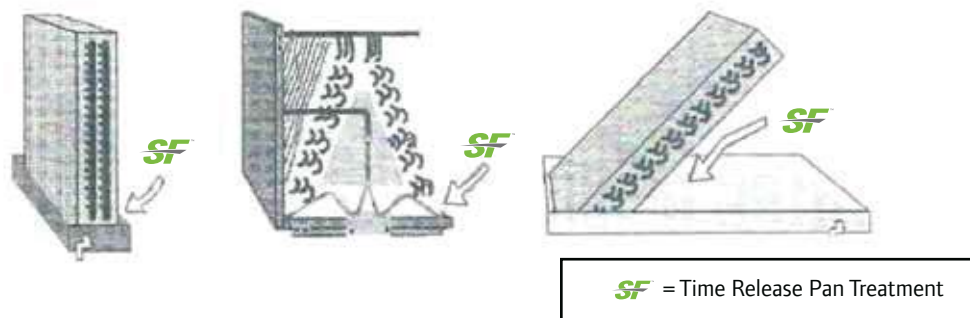


Figure 2
Time Release Technology Gives Long-Lasting Protection

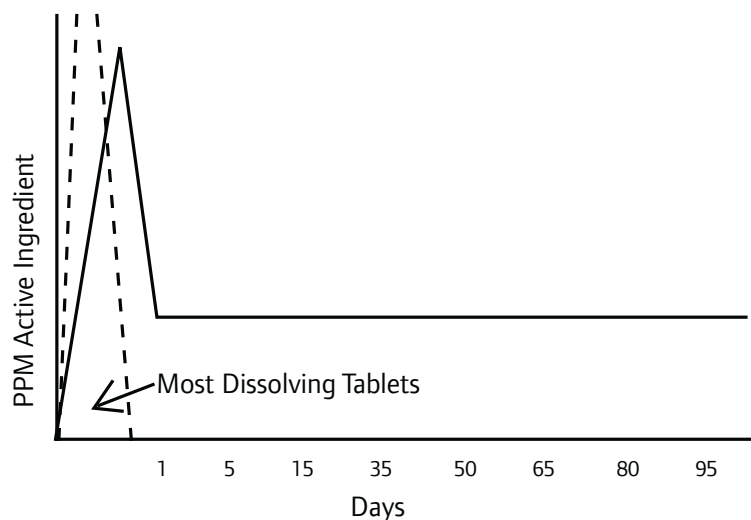

Time-Release

The treatment stays dormant when the drain pan is dry. The product will continue activating and deactivating as wet and dry conditions change. (See Figure 2) Replacement should be done according to a regular maintenance schedule (every 90 days is recommended). Simply remove the “old” strip and dispose of it properly.